

Planters with wheels

In this manual, we explain how to assemble wheels under our planters. This manual applies to all our planters with wheels. We recommend following this manual.

NOTE!


- Maximum capacity is 450 kg per wheel. The planter is secure and can carry the weight of your plants. It is however important that you follow our planting advice at the bottom of the manual.
- Do not place trees in our planter with wheels. This may cause the planter to become too heavy and sag.
- Follow our planting advice.



Install wheels


CORTEN STEEL

1. Wheels are supplied separately with the planter. Assembly is very easy, see image on the right.
2. Insert the bolt with washer on the inside of the planter through the hole in the square plate.
3. Slide the wheels over the bolts and then tighten them with the supplied nuts.

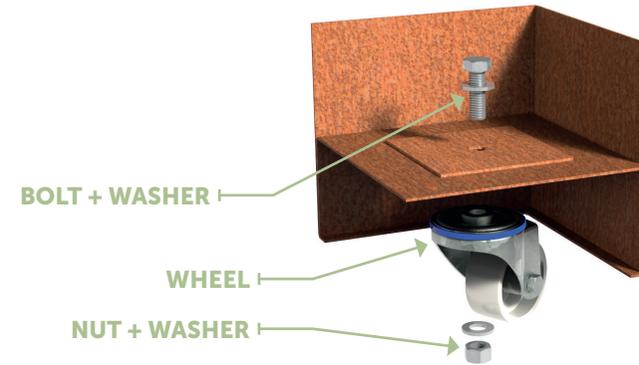

ALUMINIUM


1. Wheels are supplied separately with the planter. Assembly is very easy, see image on the right.
2. Insert the bolt with washer on the inside of the planter through the hole in the square plate.
3. Slide the wheels over the bolts and then tighten them with the supplied nuts.

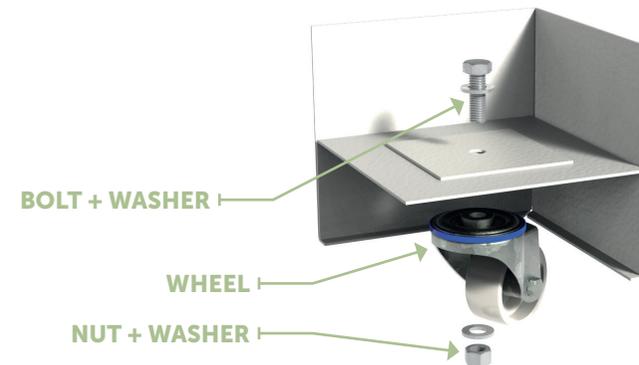

FIBREGLASS

1. Wheels are supplied separately with the planter. Assembly is very easy, see images on the right.
2. Position the wooden board with the four large holes upwards and press the carriage bolts firmly all the way in (see detailed picture).
3. Then slide the wheel over the bolt and tighten it with the supplied nut.
4. Then place the wooden board with wheels under the planter, they do not need to be connected to each other.

Note! Make sure that the drainage holes of the wooden base and the planter are leveled so that the water can drain away properly.

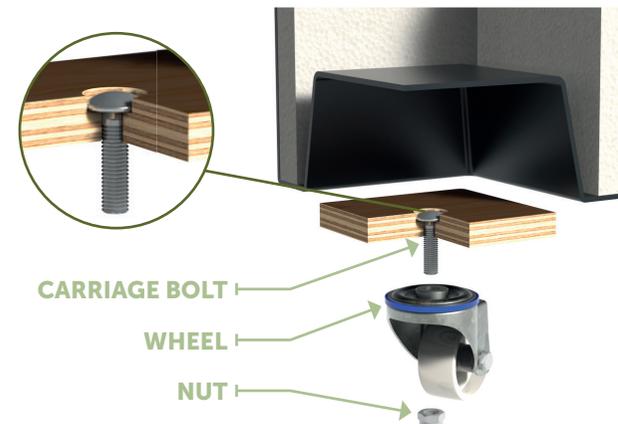

Planting advice

CORTEN STEEL

1. Cover the bottom of the planter with a layer of gravel (approx. 10 cm, Ø35 mm grading).
2. Place a permeable anti-root membrane over the gravel.
3. Cover the membrane with soil suitable for your chosen plants.
4. Do not use an overflow pipe; no water should remain in the corten steel planter.

ALUMINIUM AND FIBREGLASS (GLOSSY)

1. Insert the overflow pipes into the drainage holes prepared for them.
2. Fill the planter with about 10 cm of drainage material.
3. Place a permeable anti-root membrane over the drainage material.
4. Cover the membrane with soil suitable for your chosen plants.
5. Keep the drainage holes clear so that excess water can run off.

HARDWOOD

1. Fill the planter with about 10 cm of drainage material.
2. Place a permeable anti-root membrane over the drainage material.
3. Cover the membrane with soil suitable for your chosen plants.

