



RETAINING WALL SEATS



Product description

FURNS offers 2 different seating options to transform a retaining wall to a seat. Both versions are available in 4 different sizes. The seats are made of Garapa hardwood of durability class 2 and they are fixed in place on galvanised steel rail. The seats are easy to install on existing retaining walls.

Extra information about fixing the seats is on page 2.

SPECIFICATIONS

General information

Our seats consist out of:

- Material seating: Garapa hardwood
- Beam size Length seating: 40x60 & 40x90mm
- Beam size Width seating: 65x65mm
- Mounted on galvanized strips
- 5 year warranty (descending)

Wood

- Durability class 2 hardwood
- Warm appearance

IMPORTANT

Points of attention

- The products must be unpacked immediately after delivery.
- Every kind of (hard) wood will turn grey under the influence of UV radiation, weather and wind. The final colour depends on the starting colour.
- Wood is a natural product that "works" and will shrink or expand depending on temperature and moisture content. Regularly oiling the wood ensures that the moisture content remains more stable and that "work" remains limited.
- Like almost all types of wood, hardwood reacts to contact with iron, this can cause strong discolouration (can be visually confused with mould): only use stainless steel screws.
- Remove metal chips from your tools (bits and drills) beforehand.
- Avoid contact with lawn fertilizer and cement (these contain traces of iron).

Maintenance

- Any type of (hard) wood will turn grey under the influence of UV radiation, weather and wind. Regular cleaning (WOCA exterior cleaner) and sealing (WOCA exterior oil) of the wood ensures that the pigment in the wood is retained longer and the discolouration process is delayed.

Note! Do not use a high-pressure cleaner.

PLACEMENT

INSTALLATION ON GROUND LEVEL

1. Our seats have 2 versions and are delivered assembled on galvanised rails.

Note! Never screw the beams of the slips, this is not necessary for the assembly



2. Both seating can be mounted on our standard wide retainers. Both the aluminum as the Corten steel.

Note! Remove dirt from the retaining wall before fixing the seats


Note! With these Corten steel retaining walls it is mandatory to drill drainage holes in the top edge (under the seat). Per 500mm you will need to drill 1 hole with a minimal diameter of 10mm.



3. screw the seating on the surface. Between the wooden beams are holes in the rails to fix the seats to the surface

Because of the variety of surfaces the seating can be fixed to, there are no screws delivered with the seating.


Tip! If you fix to retaining walls we advise to use self-tapping screws.

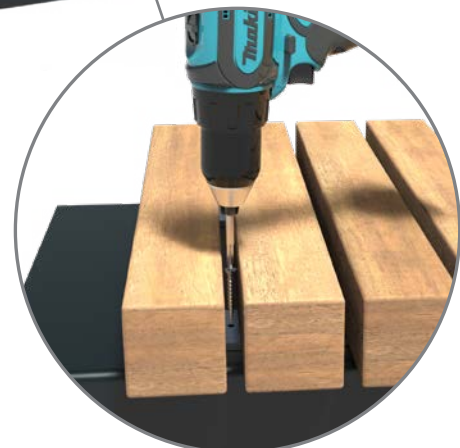

RETAINING WALLS

MODELS

For a complete overview of all our products and specifications, please visit www.adezz.com

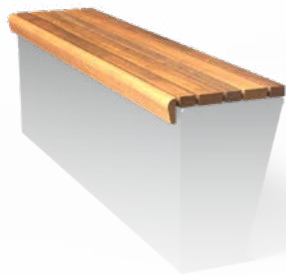

SEATING LENGTHWISE



SEATING IN WIDTH