


# ADEZZ

DESIGN TO GROW

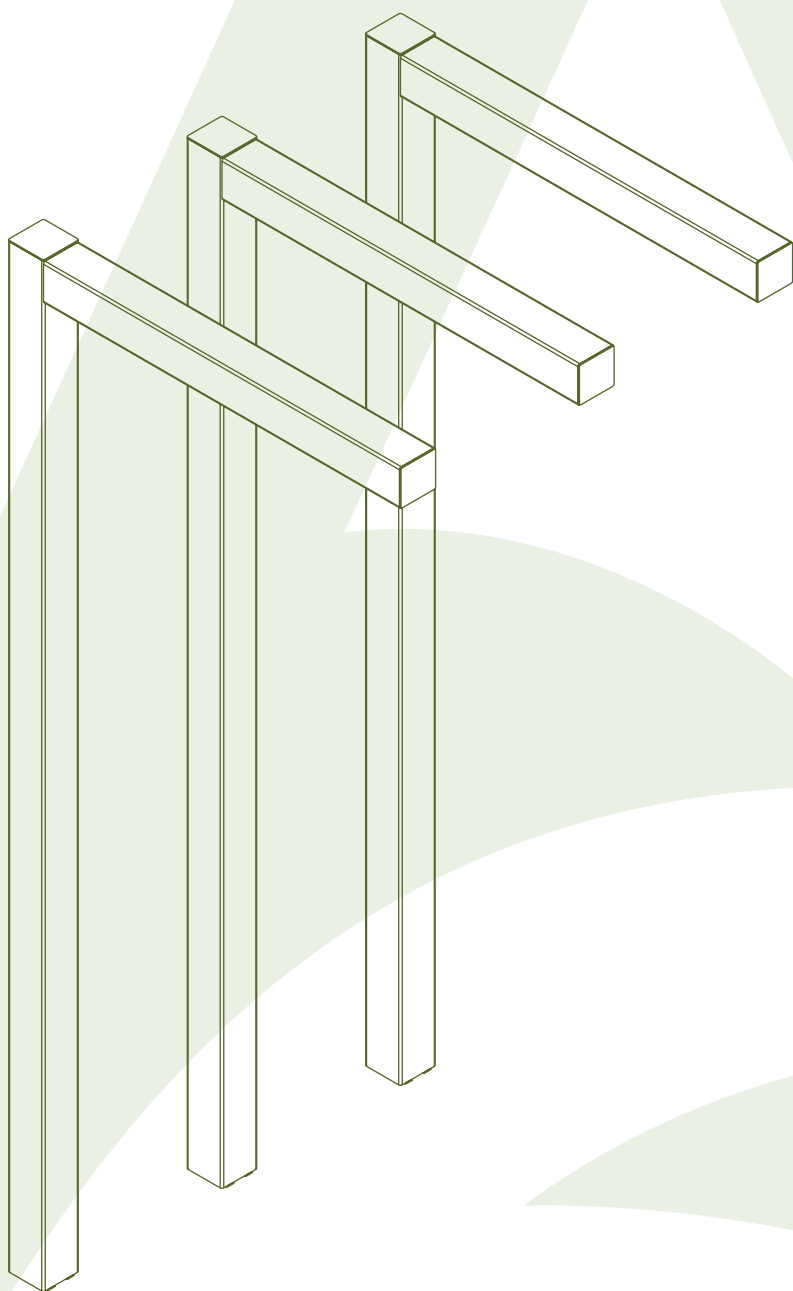


## Manual


L-SHAPE PERGOLA

## 1.A. Fixing to a foundation element

**Visual reference:** Base Plate A for fixing to a foundation element.

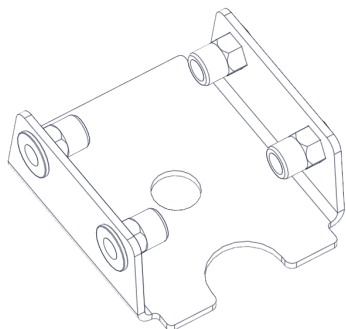


### A.1

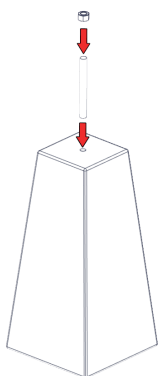


**A.1** Fix the supplied threaded rod (M16) to the concrete footing. Screw the first nut along the threaded rod.


### A.2

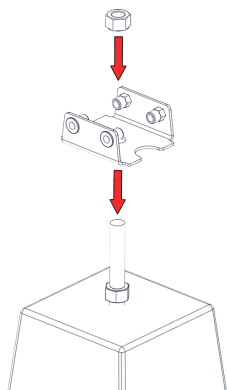

**A.2** Place the base plate along the threaded rod on top of the nut. Use this nut to adjust the height as needed. Secure the base plate by tightly screwing a second nut on top of it.

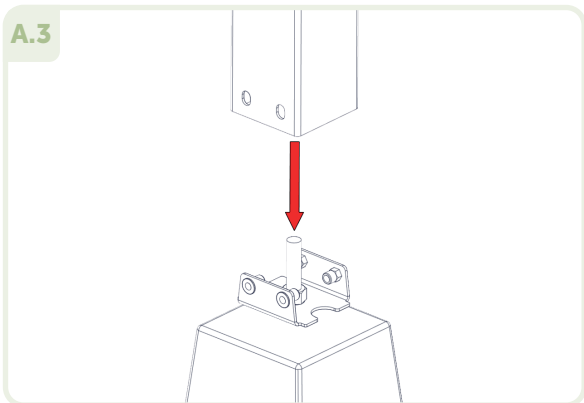**A.3**


**A.3** Slide the support over the base plate; ensure the screw holes on both parts face the same direction.

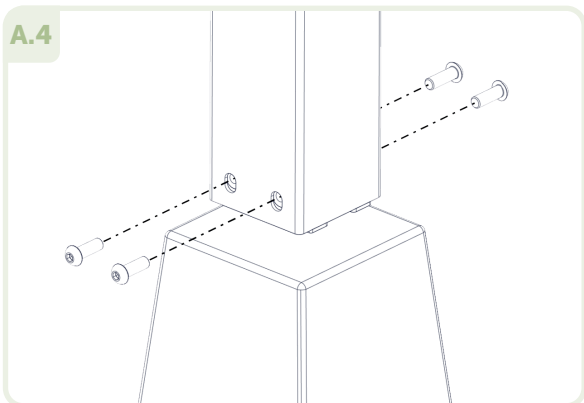**A.4**


**A.4** Use the supplied bolts to fix the support to the base plate.

## 1.B. Fixing at ground level

**Visual reference:** Base Plate B for fixing at ground level.

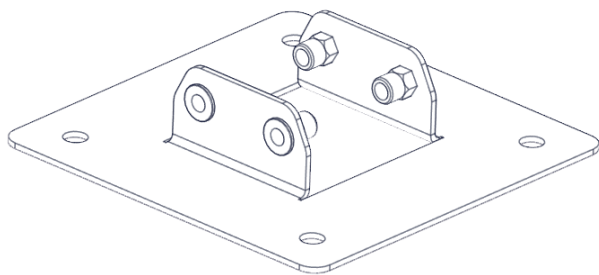


### B.1

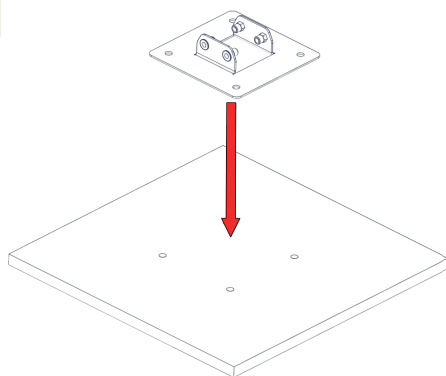


- B.1** Place Base Plate B on a flat and stable surface, such as a concrete tile.  
Prepare the surface by drilling holes according to the holes of the base plate (hole diameter = 12mm).


### B.2

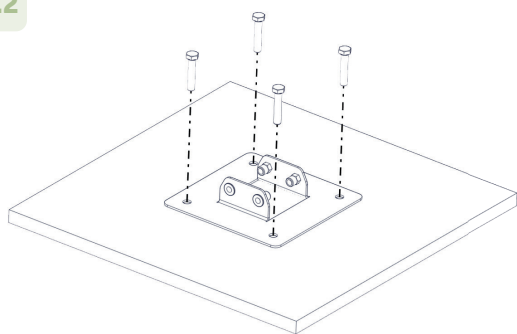

- B.2** Secure the base plate to the surface using screws or bolts.

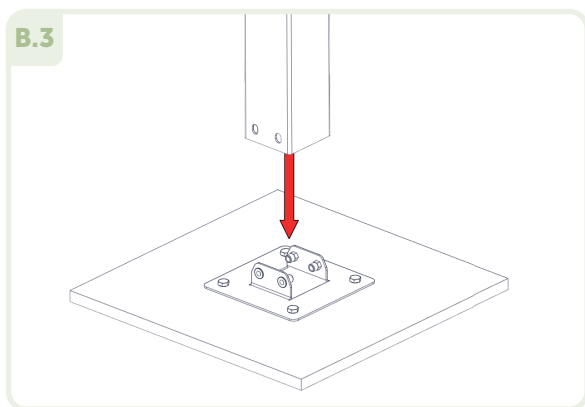


**B.3** Slide the support over the base plate; ensure the screw holes on both parts face the same direction.

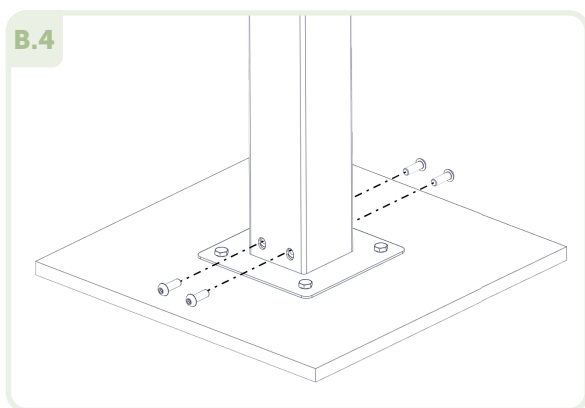

**B.4** Fix the support to the base plate using the supplied bolts.


## 2. Preparing the girder

### 2.1

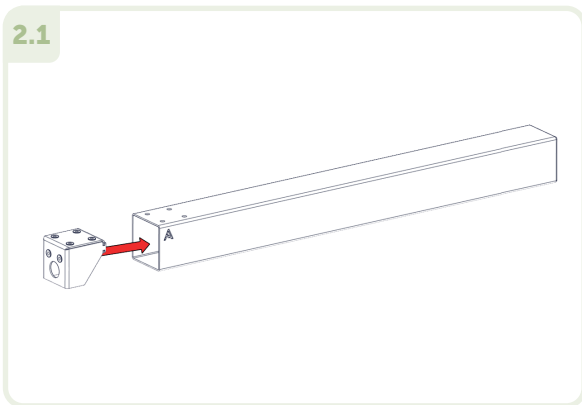

**2.1** Insert the corner piece into the girder. Make sure the screw holes line up.


### 2.2

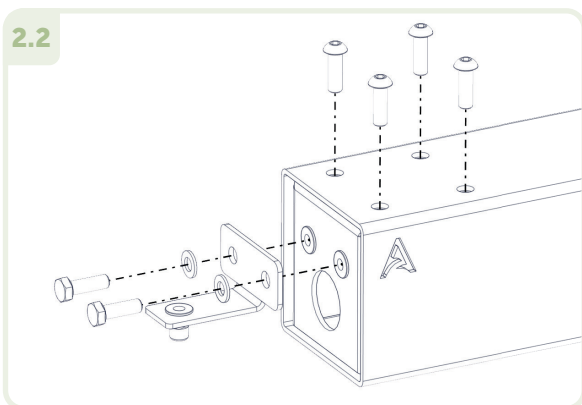

**2.2** Fix the corner piece to the girder. Then attach the locking plate to the corner piece.


**Note!** Leave a small gap between the locking plate and the corner piece. This space is needed to place the girder onto the support.

### 2.3

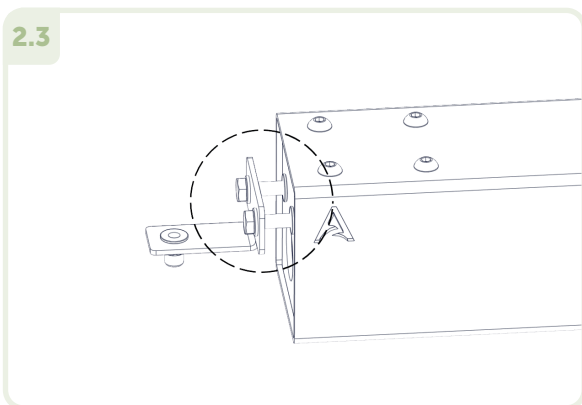


**2.3** **Note!** Leave a small gap between the locking plate and the corner piece. This space is needed to place the girder onto the support.


### 3. Placing the girder on the support

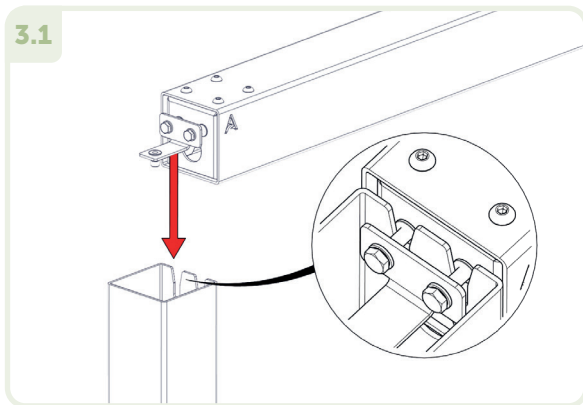

**3.1** Place the girder onto the support. Make sure the lip of the support fits between the locking plate and the corner piece. The bolts on the girder should slide into the slots on the support.

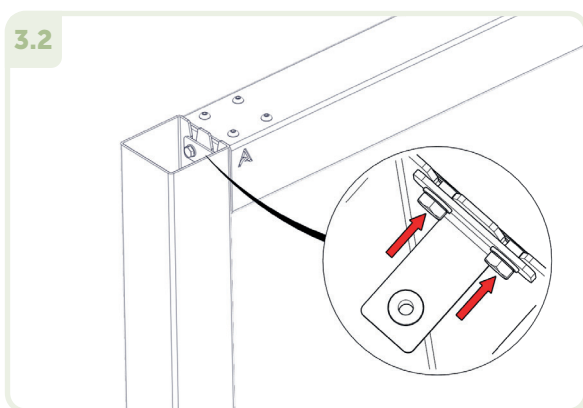

**3.2** Tighten the bolts fully. The girder is now locked in place.

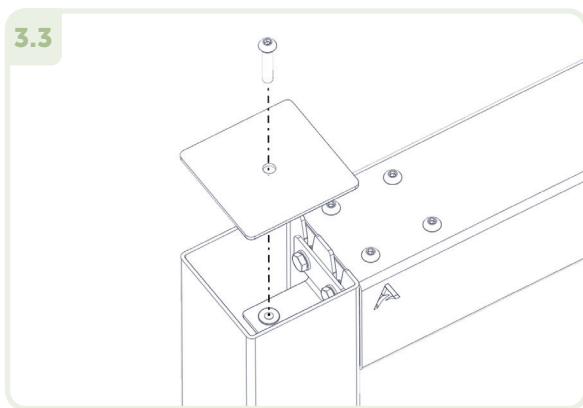

**3.3** Place the cover plate over the support and fix it to the locking plate.