


ADEZZ

DESIGN TO GROW

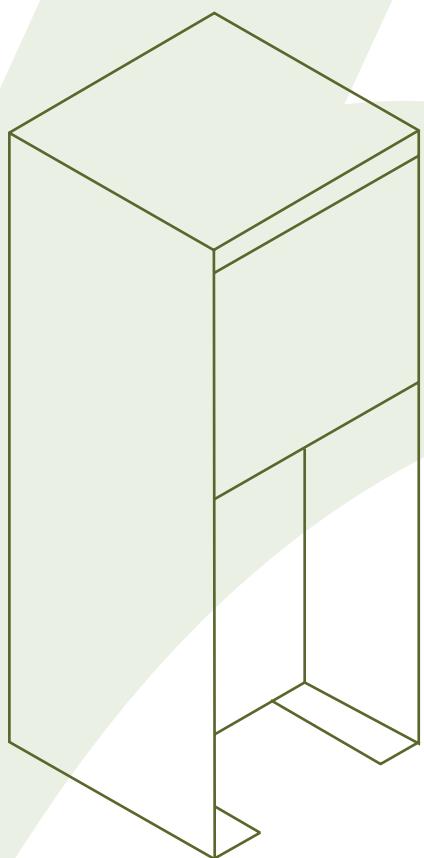

Manual
LETTERBOX FLYN

FLYN letterbox installation guide

A letterbox is the perfect solution for receiving your post securely. Follow the steps below to install your FLYN letterbox with ease and get the most out of it.

REQUIREMENTS

- Drill
- Paving slab
- Optional: ADEZZ concrete foundation block (item no. ACBP250)

PREPARATIONS

Note! Always install the letterbox on a solid base—such as a paving slab, concrete block, or other hard surface—even if it's placed below ground level. This ensures long-term stability.

Note! Make sure the ventilation and drainage holes remain above ground level for optimal water drainage.

Note! Steps 2 and 3 are not required when using an ADEZZ concrete foundation block. These blocks already have pre-drilled holes, allowing you to proceed directly with the installation.


1. Prepare a level, compacted surface. The letterbox must be installed perfectly level.

Note! If not done correctly, tension may build up in the product, potentially causing damage.

2. Use the four central slots in the base plate to mark the drilling points on your paving slab or other surface.

3. Drill holes at the marked positions.

Note! The round holes in the base plate are for drainage only—do not use them for mounting.

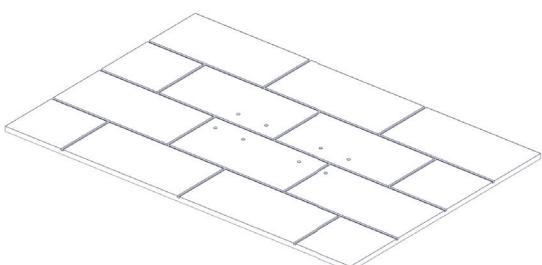


INSTALLATION


- Secure the letterbox to the surface using plugs or chemical anchors. (This step is not required if using an ADEZZ concrete foundation block.)
- Insert all bolts into the pre-drilled holes.

Note! First tighten all bolts loosely, then secure them one by one.

PAVING STONE

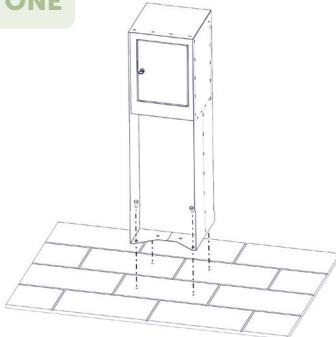

CONCRETE FOUNDATION BLOCK



- You may choose to cover the base plate with a layer of soil or gravel for a seamless finish.

ADDING A HOUSE NUMBER OR LETTER

Once your letterbox is fully installed, you can personalise it with a house number or letter. These can be easily applied to the surface.