

MIO BENCHES



Product description

The MIO series are suitable for any roof garden, public space or even private garden. Thanks to its airy design and pure simplicity, it suits every look. The entire series can easily be attached to ground level using stainless steel countersunk bolts. The MIO series consists of a sturdy 15 mm Galvanised Steel frame with a Hardwood cladding.

In the same series we also have a **picnic set and a picnic combination**. You can find these at our product categories.

SPECIFICATIONS

General

Our benches are always equipped with:

- · Mounting holes for fixing to surface
- Warranty 5 years (expiring)

Standard material

Frame material

- Corten steel 15 mm
- Galvanised steel 15 mm + 2 layer powder coating

Seat material

- Material: Garapa
- Head sizes: 190x40 mm

Options

FURNS Concrete footing

IMPORTANT

Points of attention

- All products must be unpacked immediately after delivery.
- Every kind of (hard) wood will turn grey under the influence of UV radiation, weather and wind. The final colour depends on the starting colour.
- Wood is a natural product that "works" and will shrink or expand depending on temperature and moisture content.
- · Hardwood can turn black when in contact with Corten steel, which will eventually turn gray.
- · Corten Steel should never be constantly in moisture, it should drain well and ventilate in all situations.
- · Corten Steel products are not (fully) rusted on delivery, we only use Corten steel type S355JOWP.
- Coastal areas: We do not recommend using Corten steel within a radius of 2 km from a coastline.
- During the weathering process rust residue can come off the product, which can result in stains.
- Drilling / grinding in the material is not permitted.

Maintenance


- Regular cleaning (WOCA exterior cleaner) and sealing (WOCA exterior oil) of the wood ensures that the pigment in the wood is retained longer and the discolouration process is delayed.
- Annual cleaning by removing dirt using clean tap water.

Note! Do not use a high-pressure cleaner.




PLACEMENT

- 1. Provide a flat, solid (vibrated) surface. If not done carefully, it can create stresses in the product which could result in damage to the product.
- 2. Mark the position of the holes at the bottom of the MIO bench and drill holes in the pavement.

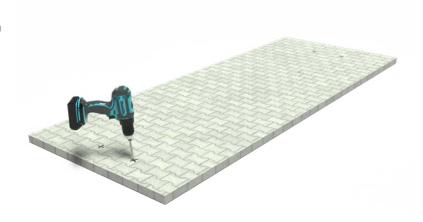

3. Place the MIO bench on the flat pavement, so that the holes in the uprights match the drilled holes.

Because the MIO bench can be placed on the pavement, the bench can be placed anywhere, without having to dig.

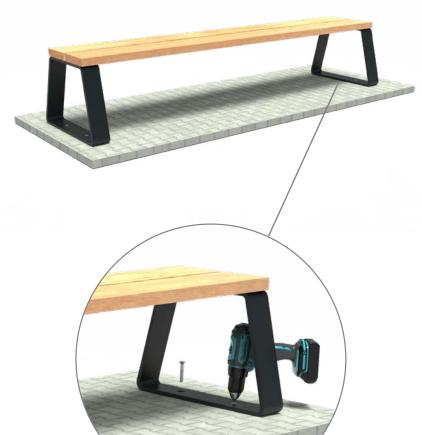

4. Fix the bench to the pavement with plugs or possibly a chemical anchor.

Pay attention! Loosely tighten all bolts first, after which they can be tightened one by one.



Models

For a complete overview of all our products and specifications, please visit www.furns.com.



MIO 2300



MIO 2300 WITH BACKREST



MIO 2300 DOUBLE + BACKREST



MIO 2300 TABLE



MIO 2300 COMBINATION



MIO 2300 SET

OPTIONS





ACCESSORIES

All our accessories meet the highest standards and are an highly suitable addition to our products. Visit www.furns.com for a complete overview of our accessories.



CONCRETE FOOTING

We advise to place our products on our uniform concrete bases. These are suitable for installation below ground level. As standard, they are fitted with screw sleeves for easy mounting of our products. See the table below for the corresponding bases per model.

Product	Model	Concrete footing	Quantity
MIO 2300	MOBE.2300S	600	2
MIO 2300 WITH BACKREST	MOBE.2300SB	600	2
MIO 2300 DOUBLE + BACKREST	MOBE.2300DB	250	4
MIO 2300 TABLE	MOTA.2300	250	4
MIO 2300 COMBINATION	MOPNC.2300	250 600	4 4
MIO 2300 SET	MOPN.2300	600	4



CLEANER & PROTECTOR

We recommend cleaning our products at least once a year. For optimal results, use the ADEZZ BIO Cleaner & Protector detergent. Always read the instructions on the package carefully before use.



CORTEN VARNISH

To stop the rusting process, Corten varnish can be applied on the Corten products. Always read the instructions on the package carefully before use.